DE **VIELLE**®

Convector Heater **2000W**

INSTALLATION MANUAL Model: DEF978548



(€ RoHS

PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE

This product is only suitable for well insulated spaces or occasional use.

Assembly Of The Heater

Thank you for purchasing our De Vielle Heater. Please keep this instruction manual in a safe place, along with the purchase receipt and carton for future reference. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

TECHNICAL

PRODUCT: Convector heater with thermostat.


RATED POWER INPUT: 750W/ 1250W/ 2000W

RATED VOLTAGE RANGE: AC220-240V 50-60Hz

THIS HEATER IS FOR DOMESTIC USE ONLY

ASSEMBLY OF THE HEATER

Before using the heater, the feet (supplied separately in the carton), must be fitted to the unit. These are to be attached to the base of the heater using the 4 self-tapping screws provided, taking care to ensure that they are located correctly in the bottom ends of the heater side moulding

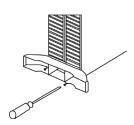

SAFETY INSTRUCTIONS (TO BE READ BEFORE OPERATING THE HEATER)

- 1. Do not use the heater unless the feet are correctly attached.
- 2. Ensure the power supply to the socket into which the heater is plugged is in accordance with the rating label on the heater and that the socket is earthed.
- 3. Keep the power cord away from the hot body of the heater.
- 4. Warning: Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- 5. Warning: In order to avoid overheating, do not cover the heater.
- 6. Indoor use only.
- 7. Do not place the heater on carpets having a very deep pile.
- 8. Always ensure that the heater is placed on a firm level surface.
- 9. Do not place the heater close to curtains or furniture in order to avoid a fire hazard.
- 10. Warning: The heater must not be located immediately below a socket-outlet.
- 11. Do not insert any object through the heat outlet or air grilles of the heater.
- 12. Do not use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
- 13. Always unplug the heater and allow it to cool before moving it from one location to another.
- 14. Warning: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- 15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 16. Children should be supervised to ensure that they do not play with the appliance.
- 17. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Safety Instructions (to be read before operating the heater)

OPERATION OF THE HEATER

NOTE: It is normal when the heaters are turned on for the first time or when they are turned on after having not been used for a long period of time the heaters may emit some smell and fumes. This will disappear when the heater has been on a short while.

Choose a suitable location for the heater, taking into account the safety instructions above.

Power switch


Insert the plug of the heater into a suitable socket.

Turn the thermostat knob fully in a clockwise direction to Thermostat the maximum setting.

Turn on the heating elements by means of the rocker switches on the side panel. When the heating elements

are on the switches will illuminate. For maximum heat output both switches should be on.

When the desired room temperature has been reached, the thermostat knob should be turned slowly anti-clockwise until the thermostat is heard to click off and the lights on the element switches are seen to go out. After this the heater will keep the air temperature in the room at the set temperature by switching on and off automatically.

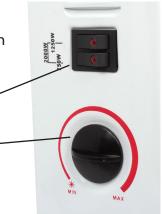

CLEANING THE HEATER

Always un-plug the heater from the wall socket and allow it to cool down before cleaning. Clean the outside of the heater by wiping with a damp cloth and buff with a dry cloth. Do not use any detergents or abrasives and do not allow any water to enter the heater.

STORING THE HEATER

When the heater is not used for long periods of time it should be protected from dust and stored in a clean dry place.

HEATER GUARANTEE

De Vielle guarantees that this heater will be free from defects in workmanship and materials for a period of 2 year from the date of purchase. Any product found to have defects in workmanship or material within the period of this guarantee will be replaced free of charge.

The conditions of this guarantee are as follows:

- A) The product has been properly maintained.
- B) Defects or damage due to normal wear and tear, accident, misuse, or interference are not included.
- C) The product is made available for inspection, together with proof of purchase. NB. This guarantee does not affect your statutory rights.

PLUG REPLACEMENT

If the plug is damaged and requires replacement,

follow the wiring instructions supplied with the new plug.

- The green and yellow wire must be connected to the terminal marked with the letter E or the earth symbol.
- The blue wire must be connected to the terminal marked with the letter N.
- The brown wire must be connected to the terminal marked with the letter L.
- A 13 amp plug to BS 1363 must be fitted a 13 Amp fuse to BS 1362.
- * For your safety and protection, this unit is earthed through the power cord plug when plugged into a matching wall socket. If you are not sure whether the wall sockets in your home are properly earthed, consult a qualified electrician. Do not use plug adaptors or extension cords with this unit.

Electric local space heaters

Information requirements for electric local space heaters

tem	Symbol	Value	Unit	ltem	Unit
Heat output				Type of heat input, for electric	storage local
•				space heaters only (select one)	
Nominal heat output	Pnom	1.8- 2.0	kW	manual heat charge control, with integrated thermostat	Not applicable
Minimum heat output (indicative)	Pmin	0.75	kW	manual heat charge control with room and/or outdoor temperature feedback	Not applicable
Maximum continuous neat output	Pmax,c	2	kW	electronic heat charge control with room and/or outdoor temperature feedback	Not applicable
Auxiliary electricity				fan assisted heat output	Not applicable
At nominal heat output	elmax	0,0	kW	Type of heat output/room ten (select one)	nperature control
At minimum heat output	elmin	0,0	kW	7	[no]
In standby mode	elSB	0,0	kW	Two or more manual stages, no room temperature control	[no]
	<u> </u>			with mechanic thermostat room temperature control	[yes]
		,		with electronic room temperature control	[no]
		,		electronic room temperature control plus day timer	[no]
				electronic room temperature control plus week timer	[no]
				Other control options (multiple possible)	e selections
				room temperature control, with presence detection	[no]
				room temperature control, with open window detection	[no]
		,		with distance control option	[no]
				with adaptive start control	[no]
				with working time limitation	[no]
				with black bulb sensor	[no]
Contact details	De Vielle	<u> </u>			

Proof of Purchase

(Please attach your receipt as proof of purchase below, as this may be required at a future stage)

Attach proof of purchase here

Your details Name: Address: Tel: Email: Date of Purchase: Location of Purchase: Add details of query here:

Please complete this form in full & attach receipt/proof of purchase.

If you have any queries, please send in a scan or photograph of the above form, including all details relating to your query to info@mcl.ie

DE VIELLE

Manufactured for and Imported by McLoughlinsRS

Unit 5, Northern Cross Business Park, North Road, Finglas, Dublin 11, D11 CKV6, Ireland Tel. (+353) 1 823 9200

EC Declaration of Conformity

We McLoughlinsRS - D11 CVK6 (importer) declare that the product(s):

Designation: CONVECTOR HEATER 2000W

Code(s): DEF978548
Model(s): SMDL01A
Batch/Serial No: As per rating label

Country of manufacture: China

Rated input voltage: 220-240V AC 50Hz

Rated power input: 2000W

Complies with the following directive(s):

Electromagnetic Compatibility (EMC) Directive 2014/30/EU Low Voltage (LVD) Directive 2014/35/EU RoHS Directive (EU) 2015/863 amending 2011/65/EU

The conformity assessment procedure followed was in accordance with:

EN55014-1:2017 EN55014-2:2015 EN61000-3-2:2014 EN61000-3-3:2013

EN60335-2-30:2009+A11:2012 EN60335 1:2012+AC:2014+A11:2014 EN62233:2008

IN CASE OF ALTERATION OF THE PRODUCT, NOT AGREED UPON BY US, THIS DECLARATION WILL LOSE ITS VALIDITY.

Authorised Signatory and Technical File Holder

Date: 17/04/2020

Name: Kieran McLoughlin

Position: Director

Company: McLoughlinsRS

Address: Unit 5, Northern Cross Business Park, North Rd.

Finglas, Dublin 11, D11 CKV6, Ireland

Web: www.mcl.ie

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for re-cycling.



DE VIELLE