NORDHAUS WIRELESS CHARGING Cabinet Witch Speaker

ASSEMBLY INSTRUCTION

Thanks for purchasing one of our products, please read carefully the assembly instructions before the installation (Attention: Do not tighten the screws before all screws are in place).



TWO PEOPLE S-36A

General Care:


-Keep your furniture out of direct sunlight-Use desk pads and coasters to protect the surface from dents, scratches, and moisture from hot or cold liquids.

Cleaning:

- -For cleaning, wipe the surface with a damp (not wet) cloth or wipe dry with a clean lint free cotton cloth.
- -Window cleaning liquid or a similar cleaning liquid can be used to clean glass surface.



PARTS LIST

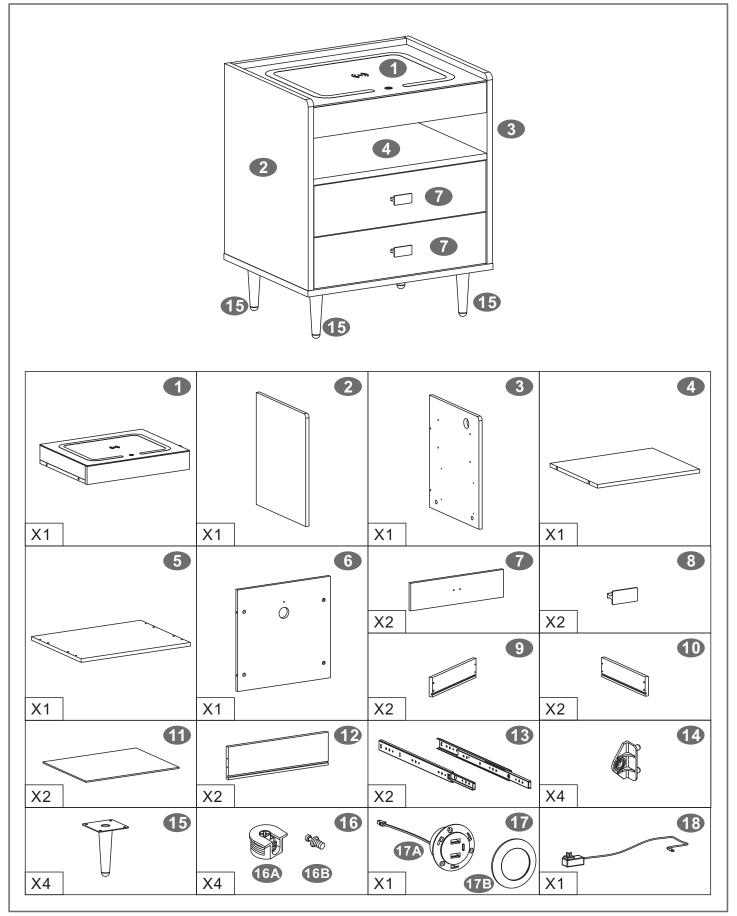


19		
X1		

P.3

SCREWS LIST


/// S-36A

PART	QTY.	ITEM		PART	QTY.	ITEM	
Α	9	6X40 MM		F	8	4X35 MM	Dunnum
В	4	6X12 MM		G	4	5X40 MM	f)_n
С	3	3X12 MM	(Juinne -	Н	9	Φ 15 MM	÷,
D	24	3X15 MM	()))))))		4	8X30 MM	
Е	16	4X14MM	() TITTE		1		

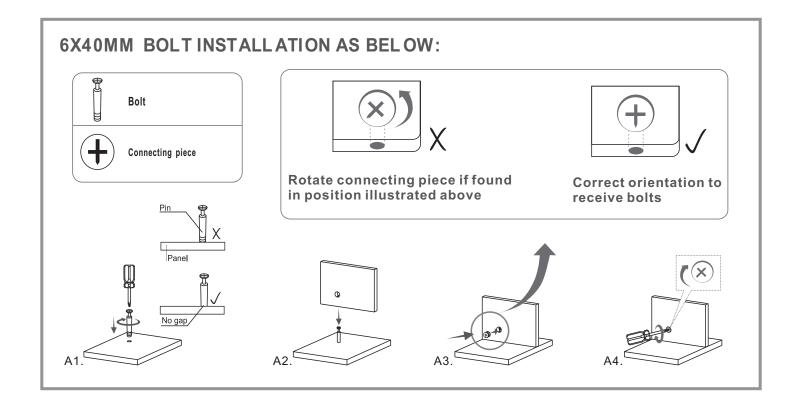



์ S-36A


ASSEMBLY STEPS:

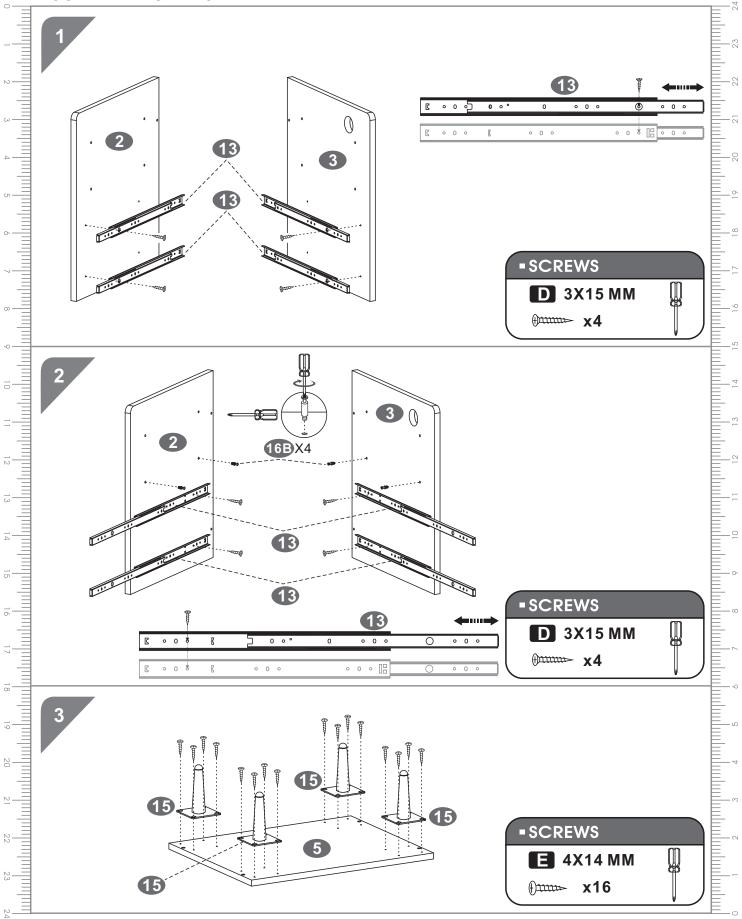



P.4

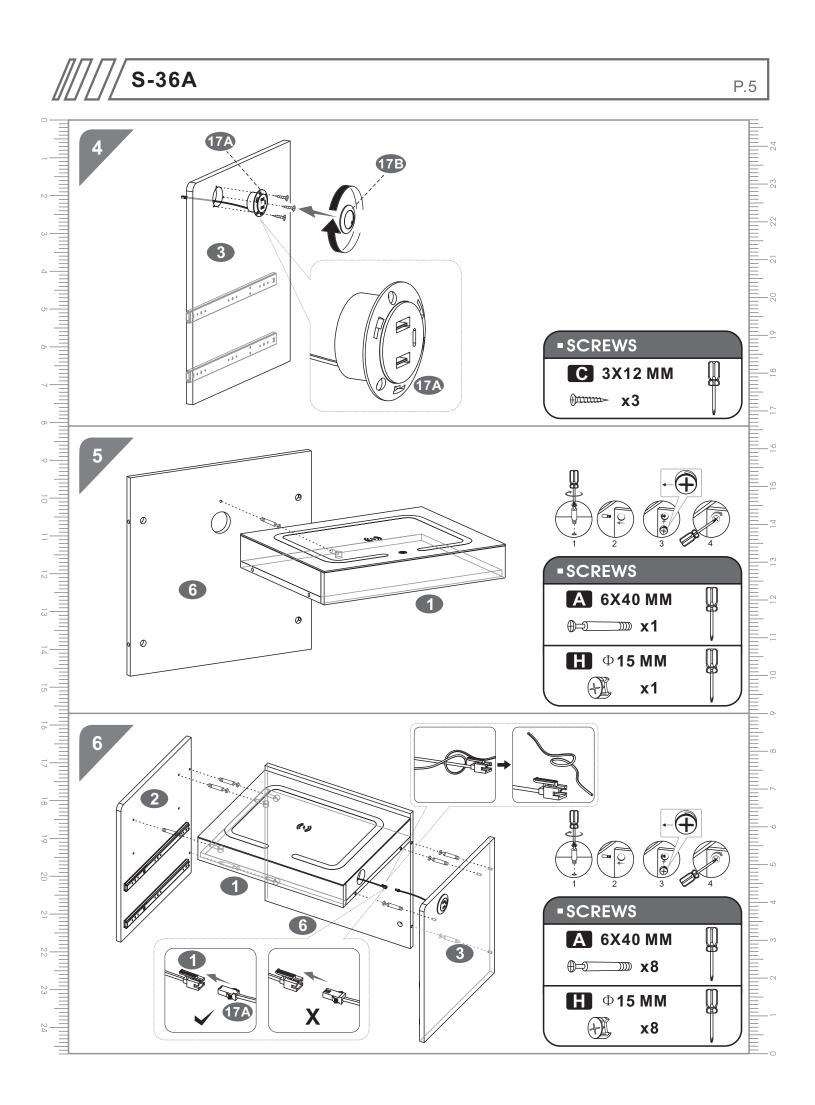


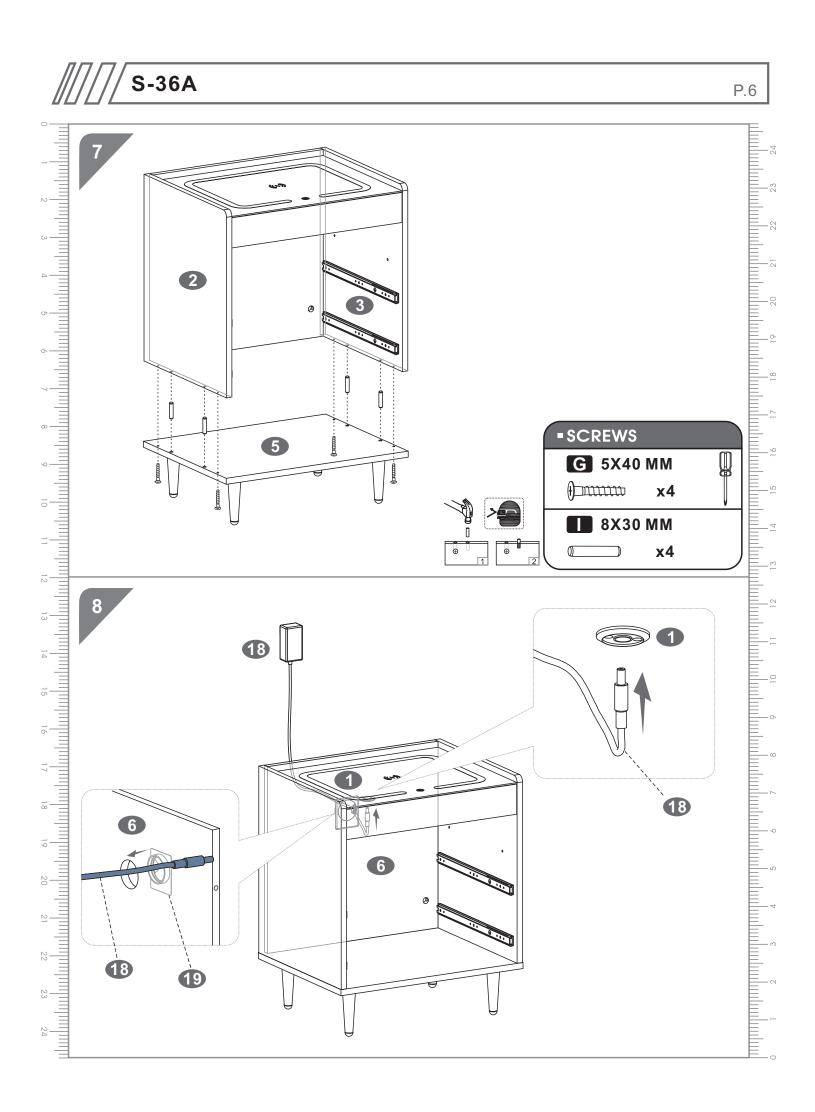

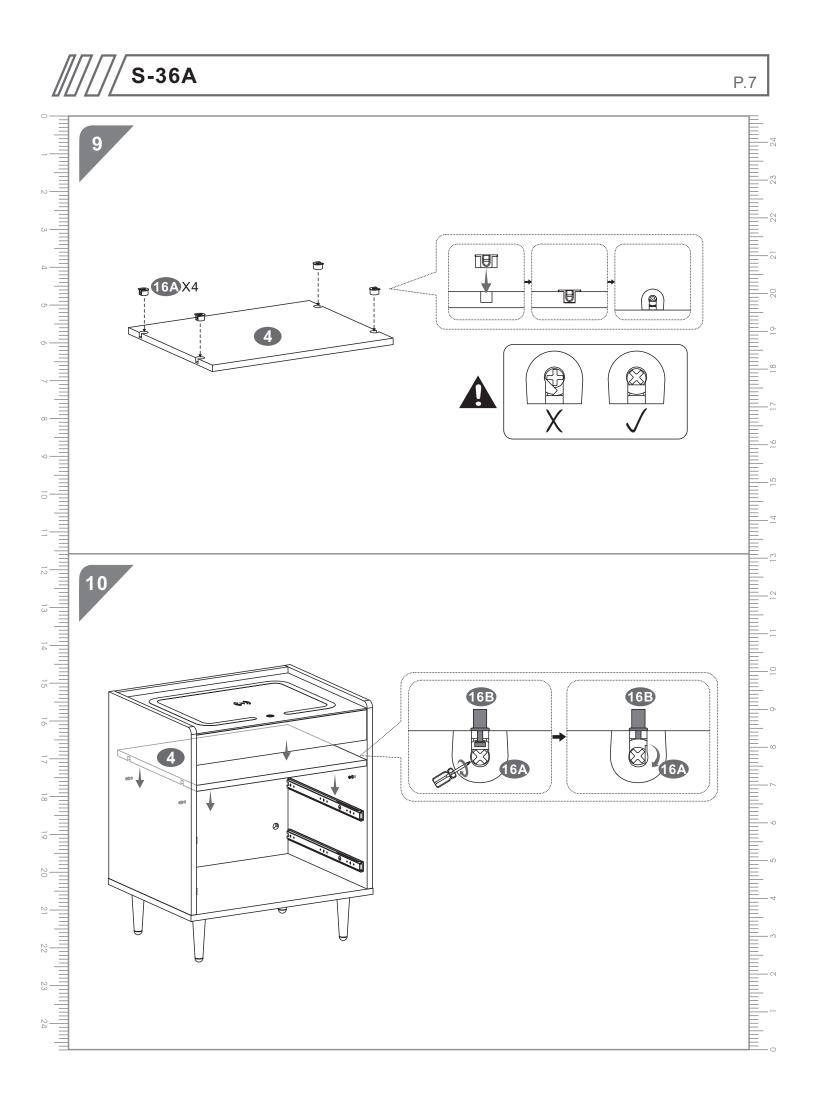

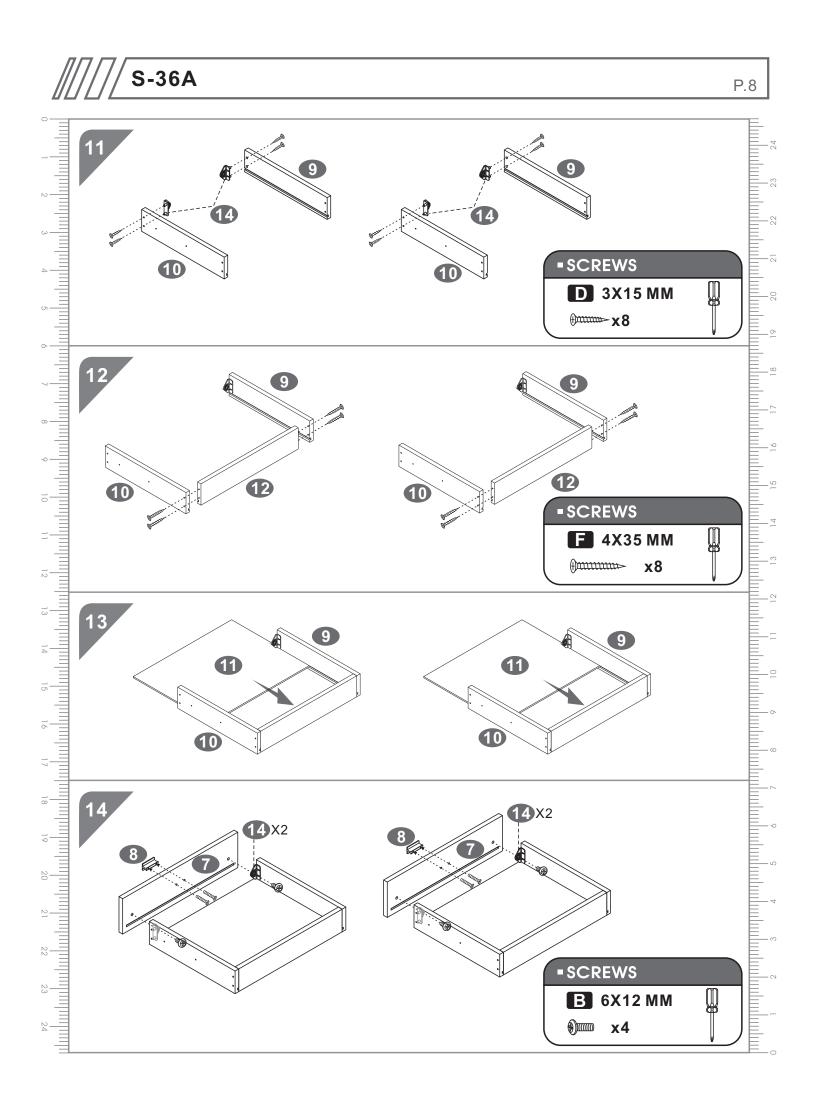

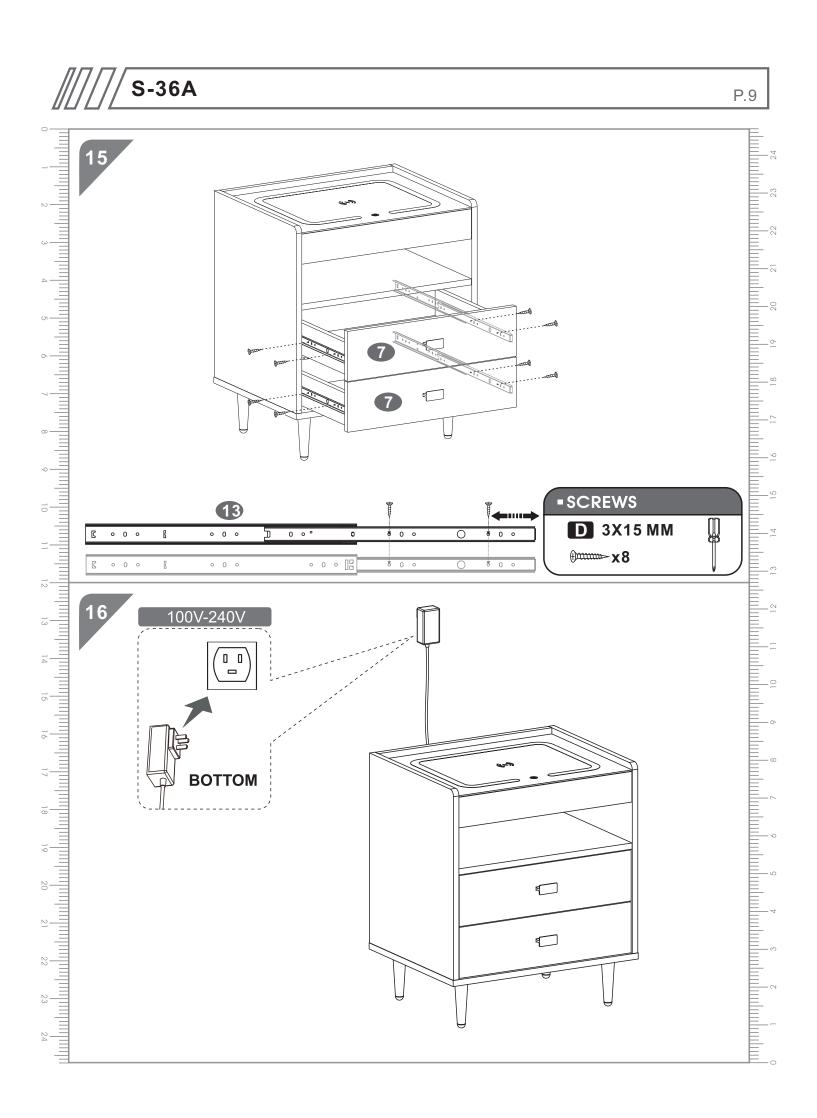

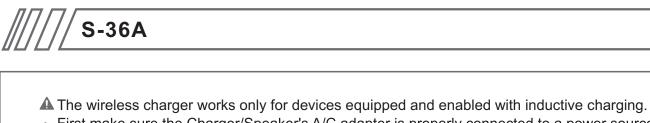

- First make sure the Charger/Speaker's A/C adapter is properly connected to a power source.
- Place your device over the surface of the charging pad with the symbol " $((\mathbf{v}))$ ".
- When charging, your device should display the charging status indicator.
- Keep an eye on your device, and when fully charged, remove it from the charging pad.

