

crivit®



www.lidl-service.com



## COMPLETE FISHING SET KING ALLROUND 360-4

FOR A VARIETY OF FISH IN FRESHWATER AND SALTWATER

GB IE

## COMPLETE FISHING SET KING ALLROUND 360-4

Instruction Manual / Safety Notes & Legal Information / Service

IAN 272472

GB IE

Congratulations! With this purchase you have decided on a high-quality product. Carefully familiarize yourself with the following instructions and use the product as described and only for its intended purpose. Please retain instructions for your future reference and use. If product is transferred to a third party, please forward these documents.

In float fishing, a natural bait is offered in free waters with the help of a float. Baits that are used at the water surface don't need a bite indicator as the bite can be recognised visually. If the bait touches the ground, you talk of ground fishing.

**Contents Include:**  
1 x All-Round Fishing Set 360-4  
Equipment Parts

Instruction Manual

**Technical Data:**  
Rod Length: 360 cm  
Casting Weight: -100g  
Fishing Reel: Size 5000  
Fishing Line: ø 0,35mm  
Test: 7,2kg

### Assembly instructions:

1. The medium stationary reel is assembled on the rod.
2. Check the proper fit and the secure hold of the reel on the rod.
3. Open the bail arm of the reel.

4. Pull the line through all line rings of the rod.
5. Assemble the stopper.
6. Thread the bead.
7. Add a small sliding float with a load bearing capacity of max. 20 g.

8. Depending on the load bearing capacity of the float, clamp the lead shot or add round lead or lead olive.
9. If a round lead or a lead olive are used, another stopper must be assembled for the protection of the knot at the swivel.
10. Fasten the medium swivel by means of a half, locked blood knot.

11. Check the knot for right fit and by a tensile test.
12. If a floating lead is used, the previously assembled stopper (see point 9) must now be pushed on the knot so that it protects the latter from contact with the lead.
13. Hang the leader with hooks of size 2 to 8 in the karabiner of the swivel.

14. Close the karabiner of the swivel.
15. The stability of the leader must under no circumstances be higher than that of the main line.

16. Check the knots of the leader by means of a tensile test.

17. Close the bail arm of the reel.

18. Adjust the brake of the stationary reel.

19. Have the following accessories with you:
- (a) Mesh landing net
  - (b) Measuring device
  - (c) Stunning equipment
  - (d) Knife
  - (e) Unhooker or unhooking pliers

The fish species that are most often caught using this fishing method are: carp, tench, perch, trout, chub and other larger freshwater fish.

### Equipment

All telescopic rods are provided with ring protection caps. After use, this cap must be re-assembled for transport.

### Preparation and assembly of the rod

Always pull apart telescopic rods starting at the tip. Never let the rod components 'shoot' into one another. When assembling the rod, always observe the exact ring alignment. The components must be pulled far enough apart that the rod doesn't clatter when swinging. Some telescopic rods are provided with extra sliding rings that must be slid

on and fixed in the ring alignment particularly carefully.

### Warning: Incorrect assembly may cause breakage!

### Casting

During casting, the hand grasps the rod at the level of the reel foot. When doing so, the reel foot is between the middle and the ring finger. The index finger takes the line from the reel and holds it while the line is still held by the bail arm. The bail arm is then thrown. For casting, position yourself in front of the place you are aiming for and hold the rod backwards, over the head. When it has stopped oscillating, cast the rod forwards with a strong motion. If the rod tip points at the place you are aiming for, release the line, and the bait flies towards its destination.

When casting, always move smoothly. Casting jerkily may damage the rod. After casting, the bail arm can be closed manually or by turning the crank once anticlockwise. Continue turning the crank to reel the line in again.

### Loosening the hook or line

While fishing, it is inevitable that the hook or line will get stuck at some point. Don't try to free it by pulling on the rod.

### Warning: Serious danger of breakage!

Free the stuck hook/line using the protected hand. To increase your chances of success, try changing location.

### Landing

The greatest load on the rod and the line occurs when landing the fish. If the rod is pulled too far upwards and backwards, it will break (Fig. 1).

This is also the most common cause of breakages in the tip area, down to the second and third ring. These breakages are not covered by the guarantee. This includes all breakages between the tip ring and the next fixed ring.

### Rod disassembly

Before telescoping the rod, clean the water and dirt from it. When pushing the telescopic components together, do it in reverse

order, starting at the handle and working towards the tip. Never use force. Loosen the telescopic components from each other by twisting, and then telescope them. Never bang them together. Now carefully attach the ring protection cap.

### Reel assembly

All reels are supplied with an applied bail arm and a closed knurled thumb screw (transport lock). For fishing, loosen the knurled thumb screw opposite the housing. Then open the crank arm and fasten it on the spool axis using the knurled thumb screw.

### Conversion of the reel for left or right handed people

Remove the knurled thumb screw at the opposite side of the crank. Pull the crank out of the reel and re-insert it from the other side. Re-attach the knurled thumb

screw to the crank end. Never use force to open or close the crank arm. This will damage the reel and the reel housing.



### Note:

Reels with an automatic folding hinged crank will lock in place automatically when opening or closing them.

### Setting the reel drake

Stationary reels have either a head drake or a rear drake.

If set correctly, the brake stops the line or the rod breaking. The drake setting should be about half the line force or the rod's holding force. Thread the line through all the rings and fasten it behind them. Hold the rod at a 45° angle to your upright body.

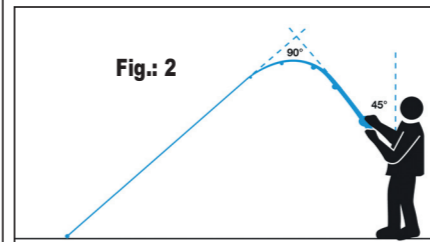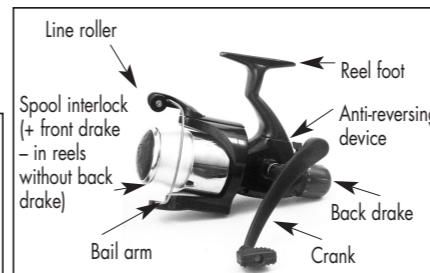

Reel the line in until it is taut and the rod bends up to 90°.

Only when in this position should the bending of the rod slowly release the line from the drake. Set the drake by fastening or loosening it until this is achieved (Fig. 2).

### Please note: improper adjustment of the reel drag can result in damage to the line, rod and/or reel.

### Checks

Check your rods regularly for correct positioning of the connections. Damage to the connections or incorrect positioning may cause breakage. The assembly of the reel at the reel holder must also be checked. If it is too loose, the reel foot may break or the reel holder be damaged.

Clean the reel after each use with clean water.

Use lubricant to maintain the moving parts, but ensure that the lubricant or moving parts do not touch the line, as this reduces the line's load bearing capacity.

### Reel attachment at the rod

Please observe the following diagrams. Ensure that the reel moves freely.



1. Open the reel holder so that there is enough space for the reel foot.



2. Insert the front reel foot into the fixed reel seat, up to the stop.



3. To connect the reel to the rod, screw in the locking nut of the variable reel seat.

To loosen the rod and the reel, follow the steps in reverse order.

**Packaging Materials**  
Please dispose of all packing materials in an environmentally responsible manner and according to your current applicable local laws.

### Fantastic for Fishing Warranty Terms

This product is warranted for 3 years from date of purchase.

Please keep original receipt.

This warranty covers materials and workmanship only. Warranty becomes void with incorrect or improper use of product.

For warranty repair or replacement, please contact our service department by phone, email or postal. Our

service department will instruct you regarding the return of defective part(s). All returns should be sent postage pre-paid to the service address provided. Repair or replacement deemed necessary under the provisions of this warranty will be made immediately and free of charge. Your rights under the law are not limited by this warranty. Original warranty period does not change due to repair or replacement.

### Service:

FANTASTIC FOR FISHING  
Schöne Aussicht 5c  
D-51381 Leverkusen

### E-Mail:

info@fantastic-for-fishing.com



### Safety Notes & Legal Information

Using fishing rods, especially graphite rods, during a thunderstorm increases the risk of being struck by lightning.

As a rule of thumb, the longer the rod, the greater the danger.

When handling the rod, and particularly when casting the bait, watch out for power lines. Touching or

coming close to a power line increases the risk of an accident. Wet fishing lines may conduct electricity!

Before casting, ensure that you will not injure anyone who might be behind you. Ensure that you have enough space.

Keep hooks and small parts out of the reach of children and animals. Danger of swallowing.

For your own safety, always wear a fishing hat and eye protection when fishing.

Avoid chemicals, e.g. sun

cream or insect repellent, coming into contact with your fishing equipment, as they could damage the rod and the line. Observe the current fishing regulations.

Always take all the necessary documents (fishing licence, fishing permit, etc).

Observe the closed seasons, size limits and other restrictions regarding environmental and species protection.

### TIP

The day before you go fishing, check your fishing equipment and accessories.

© by HOSPO - Hobby-Sport-Verlag D-51674 Wiehl