

Instruction Manual

Important: Please read all instructions carefully before using this product.

Caution: Do not attempt to inflate during unusually strong wind. If it becomes too windy for safe operation, simply allow your inflatable to deflate, secure it, and wait for better condition.

Caution: Electricity and water are a bad combination. Protect the electric fan and power cord from exposure to water.

If the external flexible cable or cord is damaged, please do not use it.

The repair of the damaged main connection cable is only allowed for a qualified technician

Warning

Do not connect the chain to the supply while it is in the packaging.

To reduce the risk of fire or shock hazard, do not expose this product to rain, moisture or dust. In addition, do not touch the inflatable if your hand is wet.

Only place the decorative item on a clean, dry surface free of snow, dirt, wetness, leaves, and other debris.

All of the included fixing coils must be used to ensure a secure position.

Components:

- Air-blown inflatable figure - Stakes and Ropes
- Fan
- Adaptor

Instructions:

1. Remove contents from the packaging. Please lay out the inflatable on a smooth surface.
2. Please be sure to check that the sealing zipper by the fan valve is closed.
3. Take the fan adaptor and plug it into the power source to begin inflation.
4. If using outdoors, use the ground stakes provided to insert into the ground. When fastening the ropes from the stakes to the inflatable, be sure to have the ropes taut.
5. When ready to deflate, unplug the power adaptor from the power source.
6. For the fastest deflation, unzip the sealing zipper by the fan valve.

Troubleshooting checklist

If the motor is not working, the operation may be...

The power source is interrupted or the cord may be unplugged. Debris may be lodged in the motor. Ensure the zipper is securely closed so air stays inside the figure.

Cleaning, storage, and maintenance instructions

Only use a mild detergent with cold water to wipe clean the figure.

Leave inflated until completely dry.

Unplug, roll up and store in the original package or a similar size box.

Do not wipe clean the motor.

This unit is not intended for use by children.